

S/N 1569459  
3/90

# **ML4400**

## **LOGIC ANALYZER OPERATING MANUAL**

February 28, 1989

Copyright, 1988  
Arium Corporation

Customer Support:  
1-800-TO-ARIUM (outside CA); 714-978-9531



## TABLE OF CONTENTS

### I. SYSTEM DESCRIPTION

A. SPECIFICATIONS	
B. OVERVIEW	I-02
C. HELP INFORMATION	I-04
D. SYSTEM COMPONENTS AND CONFIGURATIONS	I-05
1. MAJOR SYSTEM COMPONENTS AND CONFIGURATIONS	I-05
2. MAINFRAME	I-06
a. Internal	I-06
b. Front Panel	I-07
c. Rear Panel	I-09
3. CAPTURE MODULES ("CAPTURE CARDS")	I-10
a. General	I-10
b. Standard Capture Module (SC-4400)	I-10
c. High-Speed Capture Module (HS-4400)	I-11
4. LOGIC PODS	I-12
5. MICROPROCESSOR PODS	I-13
6. MISCELLANEOUS ARIUM COMPONENTS (OPTIONAL)	I-15
a. 3-1/2-inch Floppy Disk Drive (FD-003)	I-15
b. ROM Emulator Pod (RP-016)	I-15
c. Serial Data Analysis Pod (8RS-232)	I-15
E. NON-ARIUM PERIPHERAL EQUIPMENT	I-17
1. EXTERNAL KEYBOARD	I-17
2. VIDEO MONITOR	I-17
3. PARALLEL PRINTER	I-17
4. SERIAL PORT	I-17

## II. CONNECTIONS

A. MAINFRAME AND CAPTURE MODULES ("Capture Cards")	II-01
B. CAPTURE MODULES AND LOGIC PODS (100-, 200, AND 400-MHZ)	II-02
C. 100-MHZ LOGIC POD AND EXPANSION LOGIC POD	II-02
D. LOGIC POD AND SYSTEM UNDER TEST (VIA PROBES)	II-03
1. LOGIC POD PROBE SETS	II-03
2. PIN ASSIGNMENTS ON POD CONNECTORS	II-03
3. PROBE CLIPS	II-03
4. PROBE SET COLOR CODING	II-04
E. STANDARD CAPTURE MODULE AND MICROPROCESSOR PODS	II-06
1. ADAPTOR FOR ML4100 MICROPROCESSOR PODS (AD-4100)	II-06
2. STANDARD CAPTURE MODULE AND ADAPTOR OR ML4400 MICRO- PROCESSOR POD	II-06
3. ADAPTOR AND ML4100 MICROPROCESSOR POD	II-06
F. MICROPROCESSOR POD AND MICROPROCESSOR	II-07
G. OPTIONAL PERIPHERAL EQUIPMENT	II-08
1. SERIAL DATA ANALYSIS POD (8RS-232)	II-08
2. ROM EMULATOR POD(S) AND ML4400	II-09

## III. SETUP OF OPERATING PARAMETERS

A. GENERAL	III-02
1. SETUP KEYS AND SCREENS	III-02
2. CONTENTS OF THE SETUP SCREENS	III-03
3. SPECIFYING SETUP PARAMETERS	III-04
B. GROUPS	III-05
1. DEFINING A GROUP	III-05
2. GROUP OPERATING AND DISPLAY PARAMETERS	III-06
C. STATUS SCREEN	III-07

D.	CONFIGURATION SETUP SCREEN	III-10
1.	GROUPS	III-10
2.	GROUP NAME	III-10
3.	GROUP DEFINITION (CAPTURE MODULES)	III-12
4.	GROUP CLOCK SOURCE	III-13
5.	GROUP RECORD WIDTH	III-13
6.	VOLTAGE THRESHOLD FOR LOGIC PODS	III-13
E.	FORMAT DISPLAY SETUP SCREEN	III-14
1.	FORMAT FOR TIMING DISPLAY	III-15
2.	FORMAT FOR STATE DISPLAY SCREEN (and Trigger Words Setup (Screen))	III-16
3.	POD MODE	III-17
F.	CLOCK SETUP SCREEN	III-19
1.	CLOCK SOURCE	III-20
2.	CLOCK RATES	III-20
3.	INTERNAL CLOCK	III-21
4.	EXTERNAL CLOCK	III-22
G.	TRACE CONTROL SETUP SCREEN	III-25
1.	TRACE DELAY	III-26
2.	DATA QUALIFICATION (SC-4400 only)	III-26
H.	TRIGGER WORDS SETUP SCREEN	III-28
1.	TRIGGER WORDS	III-30
2.	CHANGING NUMBER BASE (TEMP BINARY softkey)	III-31
3.	TRIGGER WORD RANGE (SC-4400 only)	III-31
I.	TRIGGER SEQUENCE SETUP SCREEN	III-32
1.	PREDEFINED TRIGGER SEQUENCES	III-35
2.	USER-DEFINED SEQUENCE	III-37

#### IV. OPERATION

A. GENERAL	IV-01
1. POWER ON/OFF SWITCH	IV-01
2. HEADER LINE	IV-02
3. "HELP" INFORMATION	IV-03
4. KEYBOARD	IV-05
5. SOFTKEYS (F1-F6)	IV-11
 B. EDITING AND SCROLLING THROUGH SETUP AND DATA FIELDS	 IV-12
1. EDITING SETUP PARAMETERS AND DATA	IV-12
2. MOVING THE CURSOR--GENERAL	IV-13
3. MOVING THE CURSOR--DATA DISPLAY SCREENS	IV-13
 C. RECORDING DATA	 IV-14
 D. DISPLAYING RECORDED DATA	 IV-15
1. DISPLAY MODES--GENERAL	IV-15
2. TIMING DISPLAY MODE	IV-16
a. General	IV-16
b. Display Format	IV-19
c. Timing Line Labels	IV-19
d. Cursors and Marks	IV-20
e. Memory (Trace Buffer or Reference Memory)	IV-21
f. Measuring Time	IV-21
3. STATE DISPLAY MODE	IV-22
a. General	IV-22
b. Scrolling, Cursor and Marks	IV-24
c. TimeStamp	IV-25
d. Search Function	IV-26
e. Filling and Editing Reference Memory	IV-29
4. DISASSEMBLY DISPLAY MODE (Optional)	IV-31
a. General	IV-31
b. Scrolling, Cursor, and Marks	IV-32
c. TimeStamp	IV-33
d. Search Function	IV-34
f. Data Field Display	IV-35
5. SPLIT-SCREEN DISPLAY	IV-36
6. GROUPS	IV-38

E. PRINTING DISPLAYED DATA AND OTHER SCREENS (via PRINT key)	IV-39
F. MISCELLANEOUS OPERATING FUNCTIONS	IV-40
1. STORING SETUP FILES	IV-40
2. STORING REFERENCE MEMORY	IV-42
3. COMPARE FUNCTION	IV-44
4. SEARCH FUNCTION	IV-47
5. ROM EMULATION (Optional)	IV-47
6. RS232C PORT SETTINGS	IV-48
7. PERFORMANCE ANALYSIS	IV-50
a. General	IV-50
b. Data Capture Settings	IV-51
c. Time Analysis	IV-52
d. Value Analysis	IV-54
8. AUTOCAPTURE	IV-56
9. FLOPPY DISK FUNCTIONS	IV-57
G. SUPPORT FUNCTIONS	IV-59
1. CALCULATOR	IV-59
2. STOPWATCH	IV-61
3. SETTINGS FOR DATE, TIME, ALARMS, PRINTER, VIDEO AND TRIGGER BELL	IV-62
H. INFORMATIONAL DISPLAY SCREENS	IV-65
1. ASCII CHART	IV-65
2. PROBE COLORS	IV-66
3. INSTALLED OPTIONS	IV-68

## V. 8-BIT MICROPROCESSOR PODS

A. GENERAL	V-01
1. CONNECTIONS AND ADAPTOR POD	V-01
2. DISASSEMBLY	V-01
3. CONFIGURATION AND SETUP	V-02
4. OPERATION	V-03
B. 8I-080 MICROPROCESSOR POD (Supports Intel 8085, 8035/39/40, 8031/32)	V-04
C. 8M-080 MICROPROCESSOR POD (Supports Motorola 6800, 6802, 6808)	V-05
D. 8M-089 MICROPROCESSOR POD (Supports Motorola 6809, 6800E)	V-06
E. 8R-065 MICROPROCESSOR POD (Supports Rockwell 6502, 6512, 65C02, 65C102, 65C112)	V-07
F. 8Z-080 MICROPROCESSOR POD (Supports Zilog Z80)	V-09
G. 8N-080 MICROPROCESSOR POD (Supports National Semiconductor NSC800)	V-10

## VI. 16-BIT MICROPROCESSOR PODS

A. GENERAL	VI-01
1. CONNECTIONS AND ADAPTOR POD	VI-01
2. DISASSEMBLY	VI-01
3. CONFIGURATION AND SETUP	VI-02
4. OPERATION	VI-02
B. 16M-680 MICROPROCESSOR POD (for Motorola 68000/68010)	VI-03
1. GENERAL	VI-03
2. HARDWARE	VI-04
3. TRANSPARENT MODE	VI-08
4. FILTERED MODE	VI-09
5. JUMP MODE	VI-11
6. TRIGGERING CONSIDERATIONS	VI-11
7. DATA DISPLAY	VI-12
8. DISASSEMBLY SOFTWARE	VI-17
C. 16-086 MICROPROCESSOR POD (supports 8086/8087/8088)	VI-18
1. GENERAL	VI-18
2. HARDWARE	VI-19
3. MINIMUM PROCESSOR MODE, TRANSPARENT MODE ONLY	VI-25
4. MAXIMUM PROCESSOR MODE WITH TRANSPARENT POD MODE	VI-25
5. MAXIMUM PROCESSOR MODE WITH FILTERED POD MODE	VI-26
6. MAXIMUM PROCESSOR MODE WITH JUMP POD MODE	VI-27
7. TRIGGERING METHODS WITH PREFETCHING OR BYTE REPACKING	VI-28
8. DISPLAY	VI-30



## VII. 32-BIT MICROPROCESSOR PODS

A. GENERAL	VII-01
1. CONNECTIONS AND ADAPTOR POD	VII-01
2. DISASSEMBLY	VII-01
3. OPERATION	VII-01
4. CONFIGURATION AND SETUP	VII-02
a. Format Display Screen (via FORMAT key)	VII-02
b. Clock Setup Screen (via CLOCK key)	VII-02
c. Trigger Words Setup Screen (via TRIG key)	VII-02
d. Status, State, and State Search Screens	VII-02
B. 32M-682 MICROPROCESSOR POD (Supports Motorola 68020)	VII-03
1. GENERAL	VII-03
2. HARDWARE	VII-03
a. Signal Assignments	VII-03
b. Status Codes	VII-06
c. Instruction Cache	VII-09
d. Triggering Problems Due to Instruction and Data Alignment	VII-09
e. Probe Color Codes for External Input Lines	VII-11
3. DISASSEMBLY MODE	VII-11
a. General	VII-11
b. Hardware Considerations	VII-11
4. PROBE MODE	VII-11
5. DATA DISPLAY	VII-11
a. General	VII-11
b. Timing Display	VII-11
c. State Display	VII-12
d. Disassembly Display	VII-13

## VIII. ROM EMULATOR POD (RP-016)

A. GENERAL	VIII-01
B. SETUP AND CONFIGURATIONS	VIII-02
1. CONFIGURATION OF RS232C SERIAL PORT	VIII-02
2. CONFIGURATION OF ROM EMULATOR	VIII-03
C. OPERATION	VIII-05
1. TRANSFERING DATA TO AND FROM THE ROM EMULATOR	VIII-05
2. EDITING DATA IN THE EMULATED POD	VIII-07
D. HARDWARE CONSIDERATIONS	VIII-10

## APPENDICES

- A. ML4400 SPECIFICATIONS
- B. PROCEDURE FOR CALIBRATION, PERFORMANCE VERIFICATION AND MAINTENANCE
- C. ERROR MESSAGE EXPLANATIONS

## FIGURES

### I. SYSTEM DESCRIPTION

- |  |      |
|--|------|
| A. ML4400 Major System Components and Configurations | I-05 |
| B. ML4400 Mainframe Internal Components              | I-06 |
| C. ML4400 Front Panel                                | I-07 |
| D. ML4400 Keyboard                                   | I-08 |
| E. ML4400 Rear Panel Components                      | I-09 |
| F. ML4400 Rear Panel                                 | I-09 |
| G. ML4400 Microprocessor Pods                        | I-14 |

### II. CONNECTIONS

- |   |       |
|---|-------|
| A. Probe Color Codes for LP-4050/LP-8025 Ten-Pair Set | II-04 |
| B. Probe Color Codes for LP-4050 Six-Pair Set         | II-05 |
| C. Probe Color Codes for LP-8200/LP-4400 Ten-Pair Set | II-05 |
| D. Serial Data Analysis Pod Connections               | II-08 |

### III. SETUP OF OPERATING PARAMETERS

- |   |        |
|---|--------|
| A. ML4400 Keyboard  | III-01 |
| B. Record Width, Clock Rate, and Record Length                    | III-06 |
| C. Status Screen  | III-08 |
| D. ML4400 Setup Keys  | III-08 |
| E. Setup Parameter Choices (Status Screen)                        | III-09 |
| F. Configuration Setup Screen                                     | III-11 |
| G. Format Display Setup Screen                                    | III-14 |
| H. ML4400 Pod Modes   | III-18 |
| I. Clock Setup Screen   | III-19 |
| J. Maximum Clock Rates  | III-20 |
| K. Trace Control Setup Screen                                     | III-25 |
| L. Available Trigger Words  | III-28 |
| M. Trigger Words Setup Screen (with Status Bits Window)           | III-29 |
| N. Trigger Sequence Setup Screen (with "Edit Sequence" Activated) | III-33 |
| O. Available Trigger Sequences                                    | III-34 |
| P. Trigger Sequences Differences (ML4100 and ML4400)              | III-34 |
| Q. User Sequence Setup Screen                                     | III-37 |

#### IV. OPERATION

A. ML4400 Front Panel	IV-02
B. Help Topic Accessed from Timing Screen	IV-03
C. Help Topic Index	IV-04
D. ML4400 Keyboard	IV-05
E. Timing Display Screen (X4, with Curtain)	IV-16
F. Timing Display Screen (X1, with Trigger, Cursor and Mark)	IV-17
G. State Display Screen (Accum. Time Mode, with Trigger and Mark)	IV-23
H. State Display Search Screen (with Search Results Window)	IV-27
I. Search Results on State Display Screen	IV-28
J. Fill Reference Memory Window (in State Display Screen)	IV-29
K. Disassembly Display Screen	IV-31
L. Disassembly Display Screen (with Search Window)	IV-35
M. Timing/Disassembly Split-Screen Display	IV-37
N. Setup File Storage Screen (with Load Setup File Window)	IV-41
O. Reference Storage Screen	IV-43
P. Compare Screen (with Results Window)	IV-44
Q. RS232C Settings Screen	IV-49
R. Performance Analysis Screen	IV-50
S. Performance Analysis Screen with Time Analysis Results	IV-53
T. Performance Analysis Screen with Value Analysis Results	IV-55
U. Disk Operations Screen	IV-57
V. Calculator Screen	IV-59
W. Stopwatch Control Screen	IV-61
X. Set Date/Time/Misc. Screen	IV-62
Y. ASCII Chart (Hex)	IV-65
Z. Probe Colors Screen (for LP-4050)	IV-66
AA. Probe Colors Screen (Microprocessor Pods)	IV-67
AB. Installed Options Screen	IV-68

#### V. 8-BIT MICROPROCESSOR PODS (No figures)

#### VI. 16-BIT MICROPROCESSOR PODS

A. Signal Assignments for 16M-680 Pod	VI- 5
B. 68000/68010 External and Status Signals for 16M-680 Pod	VI- 6
C. Trigger Setup Screen with 16M-680 Pod	VI- 7
D. 68000/68010 Status Code Examples for 16M-680 Pod	VI- 8
E. State Display Screen with 16M-680 Pod (All Modes)	VI-12
F. Disassembly Display Screen with 16M-680 Pod (Transparent and Filtered Modes)	VI-13
G. Disassembly Display Screen with 16M-680 Pod (Jump Mode)	VI-14
H. Designation of Processor/Pod Modes for 16I-086 Pod	VI-20
I. 8086/8088 Signal Assignments (Overview) for 16I-086 Pod	VI-20
J. 8086/8088 Status Signal Assignments (Detailed) for 16*-086 Pod	VI-21
K. 16I-086 Pod Status Signals Whose Names Do Not Correspond to 8086/8088 Signals	VI-22
L. External Field Signal Assignments for 16I-086 Pod	VI-22
M. Typical 8086/8088 Status Codes for Triggering on Specific Cycle Types for 16I-086 Pod	VI-23
N. Typical 8086/8088 Status Codes for Triggering on Specific Memory Segment Accesses for 16I-086 Pod	VI-23
O. Disassembly Display Screen for 16I-086 Pod (Transparent and Filtered Modes)	VI-30
P. Disassembly Display Screen for 16I-086 Pod (Jump Mode)	VI-31

VII. 32-BIT MICROPROCESSOR PODS

A. Signal Assignments for 32M-682 Pod	VII-04
B. 68020 External and Status Signals for 32M-682 Pod	VII-05
C. 68020 Data Bus Size Codes and Byte Validity	VII-07
D. 68020 Status Code Examples for 32M-682 Pod	VII-08
E. Trigger Setup Screen with 32M-682 Pod	VII-10
F. State Display Screen with 32M-682 Pod	VII-12
G. Disassembly Display Screen with 32M-682 Pod	VII-14

VIII. ROM EMULATOR POD (RP-016)

A. ROM Emulator Configuration Setup Screen	VIII-04
B. ROM Emulator Transfers Screen	VIII-06
C. ROM Emulator Editor Screen	VIII-09